

<h2 style="margin: 0;">PAVING FRAME</h2> <p style="margin: 0;">Sealmac® Paving Fabrics</p>
--

Equipment Number			
Customer			
Dispatch/Receipt	Date Out / /	Date In / /	
Store Location			
Expected Return Date			

Item Number	Number of items	Item name	Checked OUT	Checked IN	Comments
1	1	Steel Frame			
2	2	Wheels (1 on each side)			
3	1	Adjustable Squeegee Bar			
4	1	Roller Holder			
5	2	Roller Holder Discs			
6	1	Documentation (4 pages)			

This equipment has received an in-service inspection and was found to have no obvious defects.

CHECKED OUT BY

CHECKED IN BY

Name:

Name:

Signature:

Signature:

Comments: _____

Dear Customer

On receipt of this equipment, please check all equipment has been received, ensure your site staff read and understand the operating, maintenance and safety information, and use the equipment in a safe manner.

- You are responsible for the safe operation of the equipment and the safety of your staff.
- Standard Occupational, Health and Safety guidelines should be followed as per normal site operations. Site safety and safe work practices are your responsibility.
- At the conclusion of the use of the equipment, please clean the equipment, repack it for transportation and return to Geofabrics.
- Please advise if there are any missing parts. All equipment usage must be in accordance with Geofabrics' Hire Agreement. You will be charged for any damaged or missing components.

PAVING FRAME – OPERATING AND SAFETY INSTRUCTIONS

WARNING!

- Any alterations to this hire equipment may prove dangerous to the operator and will be in breach of the Equipment Hire Agreement.
- Service must only be performed by an authorised Geofabrics service organisation or representative.
- Please contact Geofabrics (0800 60 60 20) for return of this equipment or servicing if it is found to be faulty.
- All hire related documentation, operating and safety instructions are available on our website (www.geofabrics.co.nz).



The Paving Frame is designed to be used as an attachment to suitable earthmoving equipment for the installation of Sealmac® Paving Fabrics in suitable construction areas.

Pre-operational considerations

- Before operating the Paving Frame, it is important that you read and understand the maintenance and safety precautions outlined below and in the Equipment Hire Agreement document (Use and Maintenance).
- Contact Geofabrics (0800 60 60 20) if you do not understand any of the instructions in this document.
- To operate the Paving Frame, operators must be in good physical and mental condition. Do not operate if on medication or under the influence of alcohol or drugs. Seek medical advice if unsure.
- As the installation of Sealmac® products is considered a construction activity, the contractor using the hire equipment must prepare a site safety plan that incorporates the safe work methods for high risk work involving the Paving Frame.

Safety Precautions and Working Techniques

- Because the Paving Frame equipment is attached to mobile plant, site specific safety precautions must be observed to reduce the risk of people being hit / struck by the mobile apparatus.
- Steel capped safety boots must always be worn while operating or working near the Paving Frame. Keep all body parts clear of the equipment at all times when the equipment is in use.
- Always use appropriate personal protective equipment such as riggers gloves, high visibility clothing (shirt or tabard), hard hats, safety eye wear with side protectors, etc.
- Take caution when working around the equipment when it is in use, in consideration of the possibility of the Paving Frame detaching from the equipment or mobile plant.
- Do not use the Paving Frame for any application other than its intended purpose.
- Do not abuse the Paving Frame in any way which may result in personal injury and/or damage to the equipment.
- Check the condition of the Paving Frame before each use for any damage. If the behaviour of the Paving Frame equipment changes, check it immediately and return it to Geofabrics for service if necessary.
- Never modify the equipment in any way.

Site Conditions

- The Paving Frame is designed for the application of Sealmac® Products to suitable construction site areas. The Paving Frame should not be operated in conditions which could endanger the operator or other site personnel.



Figure 2

PAVING FRAME COMPONENTS

To ensure no parts are lost, all components should be stored and transported as a set, in such a way as not to cause damage to the equipment.

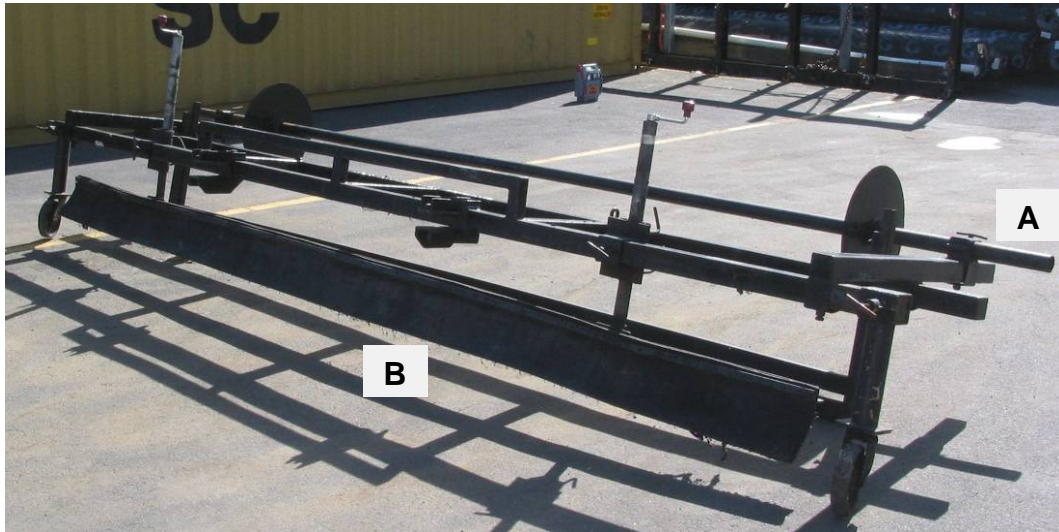


Figure 3



Figure 4

Steel Frame and Roller Holder (Fig 3,4)

- Check the frame, holder bar (Fig 3 - A) and holder discs are not bent or have major dents.

Wheels (Fig 3)

- Check the wheels work and are not damaged.

Adjustable Squeegee Bar (Fig 3 - B)

- Check the bar is not bent or have major dents.
- Check the rubber is intact and not severely damaged.

Geofabrics New Zealand Ltd.

14 Goodman Place, P.O. BOX 12536, Penrose, Auckland, New Zealand
Tel. (+64) 9 6346495 - Fax (+64) 9 6346492, FREEPHONE 0800 60 60 20
E-mail: sales@geofabrics.co.nz - Web site: www.geofabrics.co.nz
Quality System AS/NZS ISO 9001:2015

The information contained herein is general in nature. In particular the content herein does not take account of specific conditions that may be present at your site. Site conditions may alter the performance and longevity of the product. Actual dimensions and performance may vary and in all cases we recommend that advice be obtained from a suitably qualified consulting engineer or industry specialist before proceeding with installation. © Copyright held by Geofabrics NZ Ltd. All rights are reserved and no part of this publication may be copied without prior permission.